



Part Number 57-0426 INSTALLATION INSTRUCTIONS

Renault Clio Sport 172 2.0L 16v Apr 2001 On...

Renault Clio Sport 182 2.0L 16v Nov 2003 On...

1. Unclip & remove the intake hose from the air box lid. (Fig. 1)
2. Remove the 2 bolts securing the air box assembly & carefully remove the complete air box assembly from the vehicle. (Fig. 2&3)
3. Assemble the mounting bracket / saddle bracket using the tapered screw, nylon washer, flat washer & nylock nut supplied. (Fig. 4)
4. Secure the mounting bracket assembly to the lower threaded hole on the side of the cylinder head using the allen head bolt & flat washer supplied. (Fig. 5)
NOTE: (Clio 182) You will need to unbolt the engine-lifting eye to fit the bracket assembly.
5. Carefully expand the flexi cold air hose. Feed the hose down to the lower spoiler & secure the top of the hose to the coolant hose using the plastic ties supplied. (Fig. 6)
6. Taking the necessary safety precautions as per manufacturers instructions raise the front of the vehicle. Remove the 4 bolts securing the engine under tray & carefully remove from the vehicle. Secure the cold air hose to the lower cross member / spoiler trim using a plastic tie supplied. (Fig.7)
7. Assemble the air filter, aluminum filter adapter, silicone hose & straight metal adapter using the hose clips supplied. Note: Do not fully tighten the clip securing the aluminum filter adapter yet. (Fig. 8)
8. Fit the filter assembly to the original intake hose & secure using the original hose clip. (Fig. 9)
9. Place the filter assembly onto the saddle bracket; slide the hose clip around both the saddle bracket & silicone hose. Fully tighten the hose clip. (Fig.10)
10. Position the cold air hose approx. 10cm / 4" from the air filter.
11. Carry out a final check of the height/alignment of the K&N induction system before starting the engine. Installation is now complete.

Parts list:

- 1 x Air Filter Element.
- 1 x #72 Hose Clip.
- 1 x Aluminum Filter Adapter.
- 1 x Silicone Adapter Hose.
- 1 x Cold Air Hose Assembly.
- 1 x Literature Pack.
- 1 x Fixing Kit :-
 - 1 x Saddle Bracket.
 - 1 x Mounting Bracket.
 - 1 x #44 Hose Clamp.
 - 1 x #48 Hose Clamp.
 - 1 x Tapered Screw.
 - 1 x Nylon Conical Washer.
 - 2 x Flat Washers.
 - 3 x Long Plastic Ties.
 - 1 x Allen Head Bolt.
 - 1 x Nylock Nut.
 - 1 x Metal Adaptor Tube.

***WARNING:** Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

N.B. This kit should only be fitted to an unmodified vehicle



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8

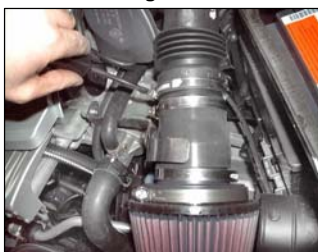


Fig. # 9



Fig. # 10

