



INSTALLATION INSTRUCTIONS

Part Number 59-2030

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

Congratulations, you have purchased the finest air filter/flame arrestor that money can buy. With proper care, this filter can last many seasons. The following procedure **MUST** be followed for proper installation of the K&N Filtercharger®.

INSTALLATION

1. Remove the air silencer hose from the plenum. (Fig. 1)
2. Remove the plenum cover from the base.
3. Remove the stock flame arrestor element, it will no longer be needed.
4. Reinstall the plenum cover.
5. Install the K&N Flame Arrestor onto the end of the plenum. (Fig. 2)
6. Use the supplied cable tie to secure any hoses or wires from touching the K&N Flame Arrestor.

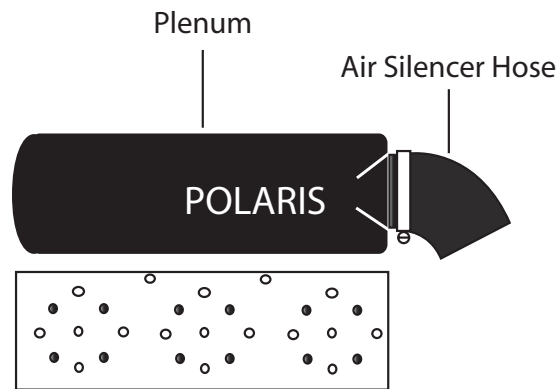


Fig. 1

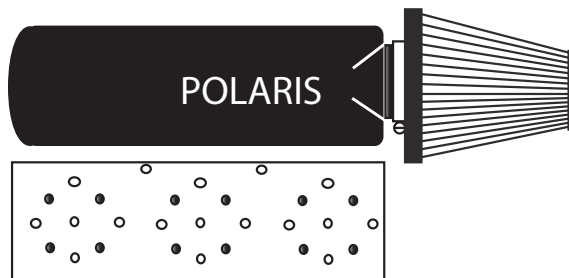


Fig. 2